
Cuisinart DLC-8F Power Cable Replacement

Use this guide to replace the power cable on your Cuisinart DLC-8F.

Written By: David Colman

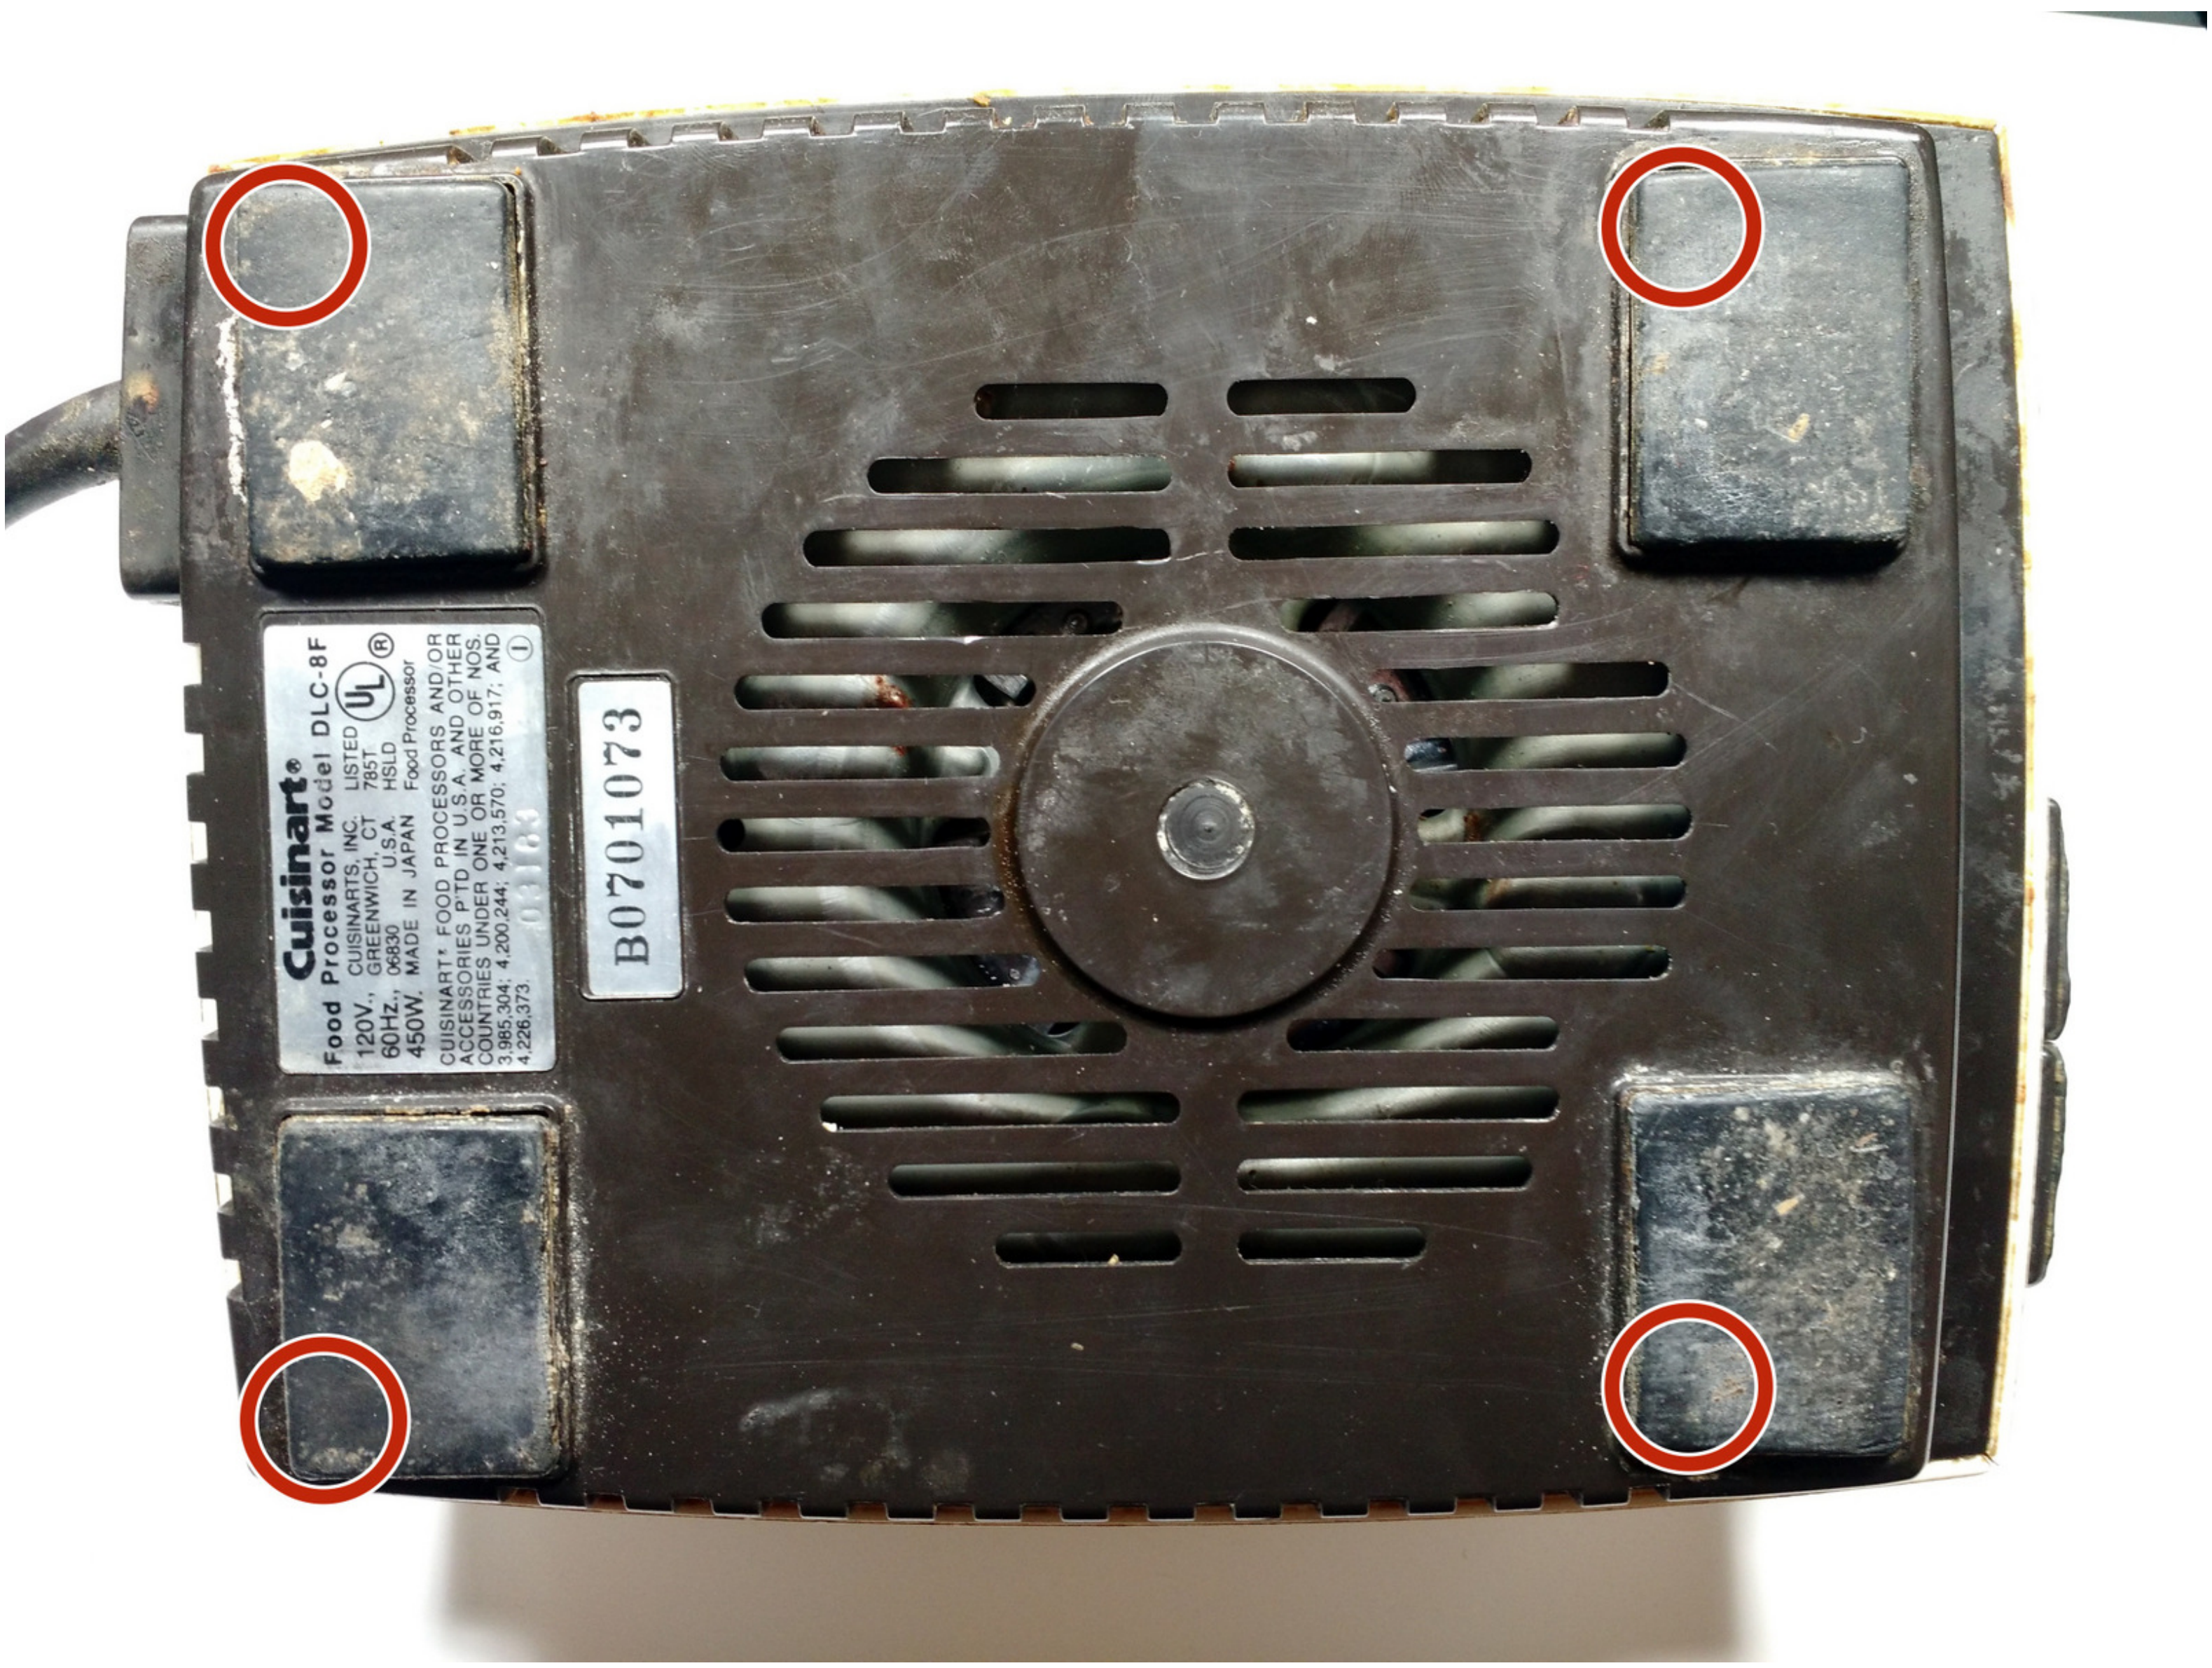


INTRODUCTION

This guide teaches the user how to replace the power cable in your Cuisinart DLC-8F. The removal of the power cable first requires the removal of the bottom hood and all of this can be done with just a Phillips #2 screwdriver. This is an easy process and should only take about 10 minutes.

TOOLS:

- Phillips #2 Screwdriver (1)

Step 1 — Power Cable

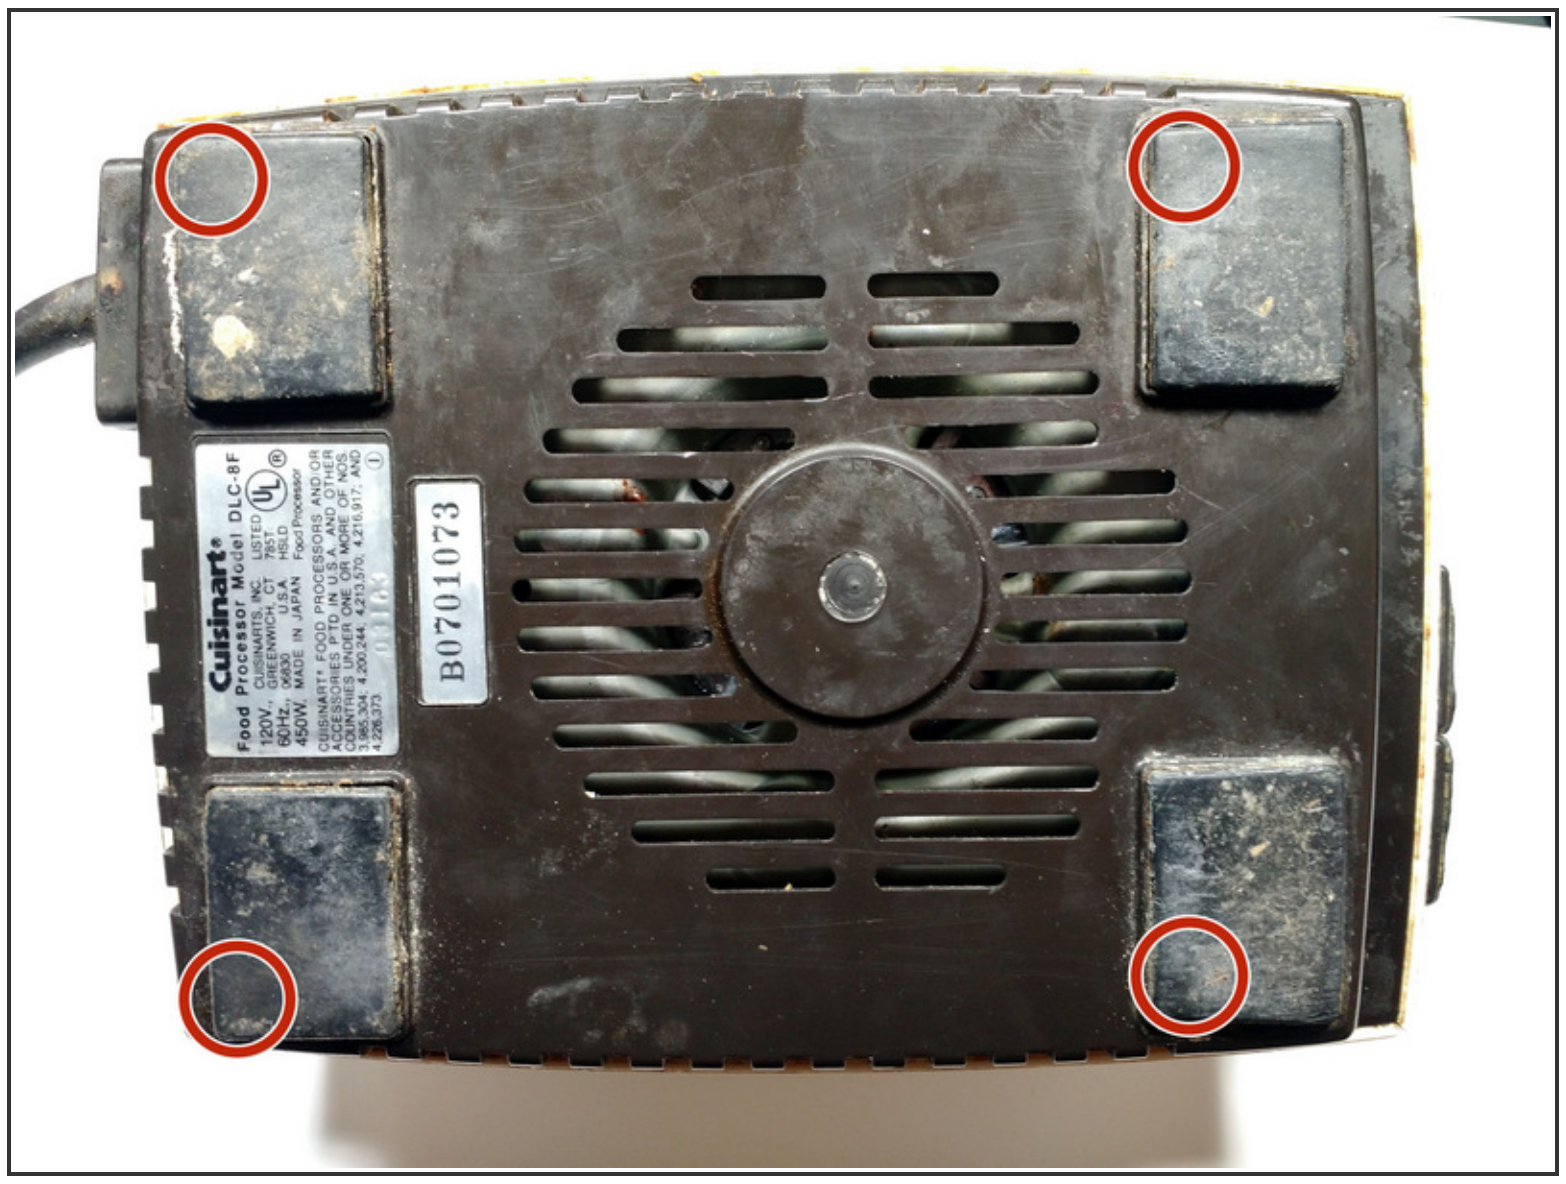




- Remove the four 18 mm Phillips #2 screws from the bottom by prying up the rubber feet to access the screw hole.


Step 2



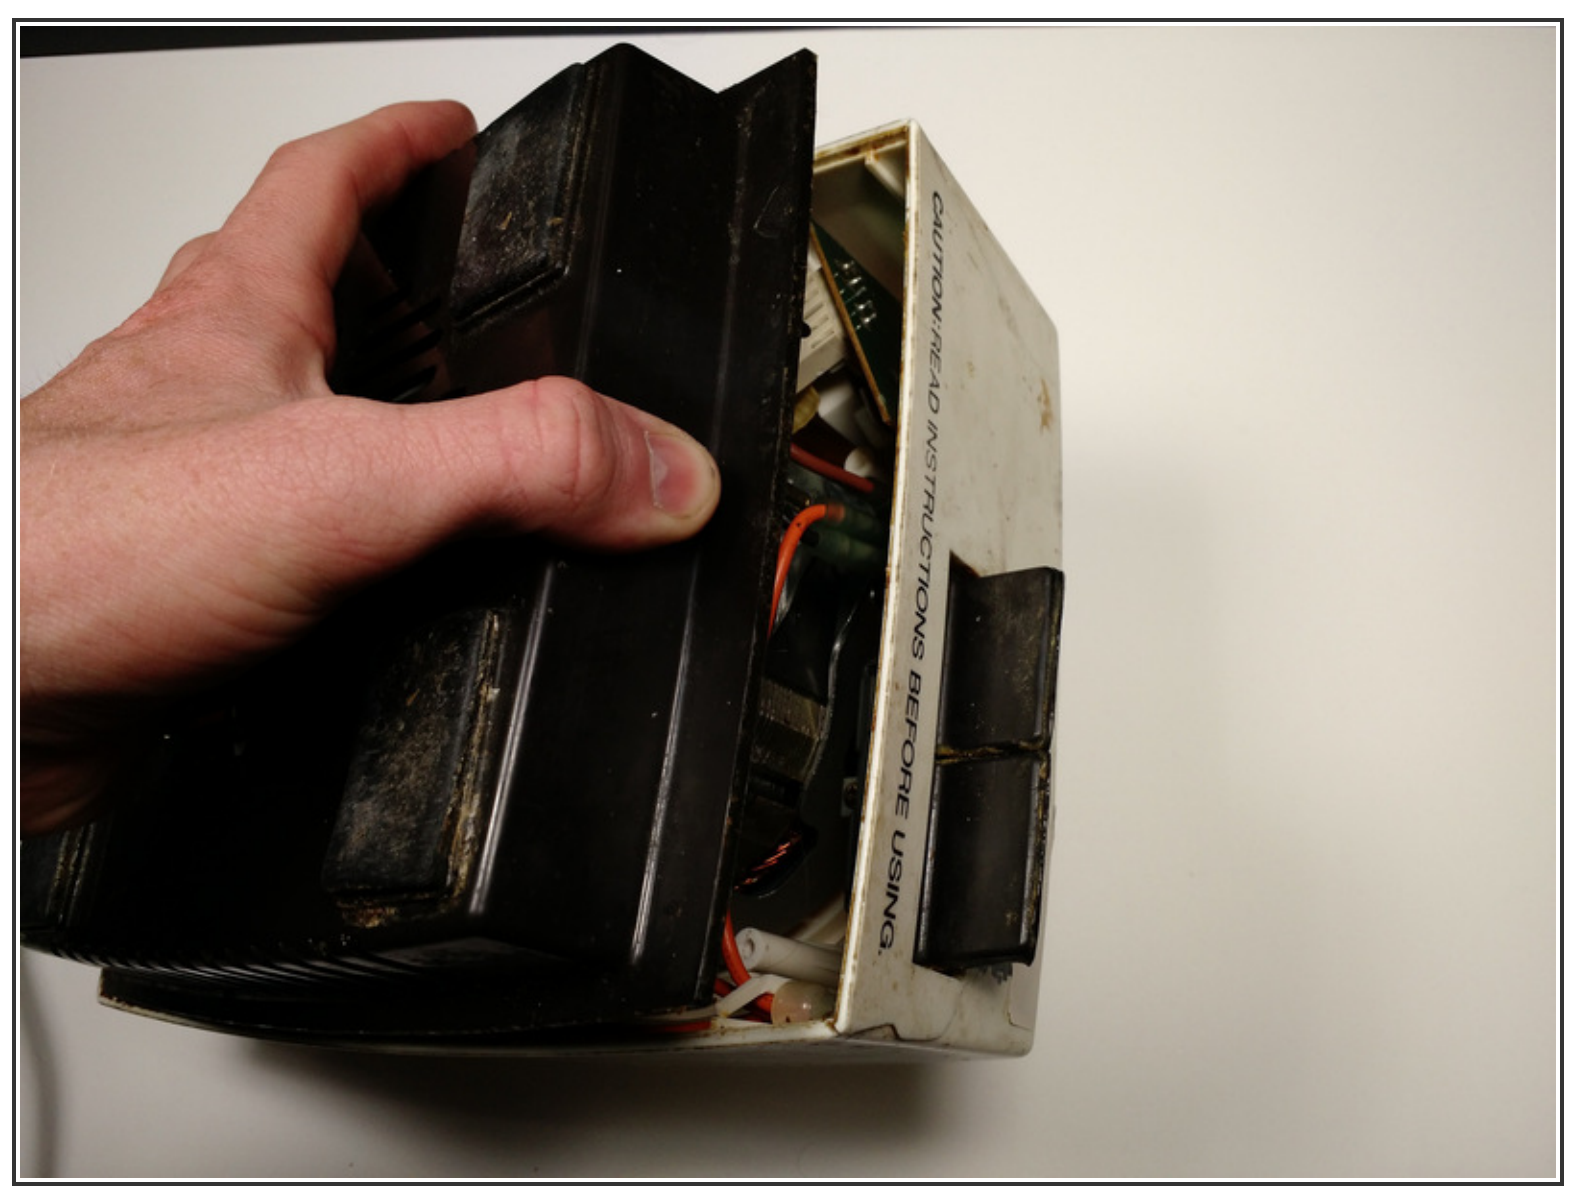


- Gently lift the bottom cover from the main body.


Step 3

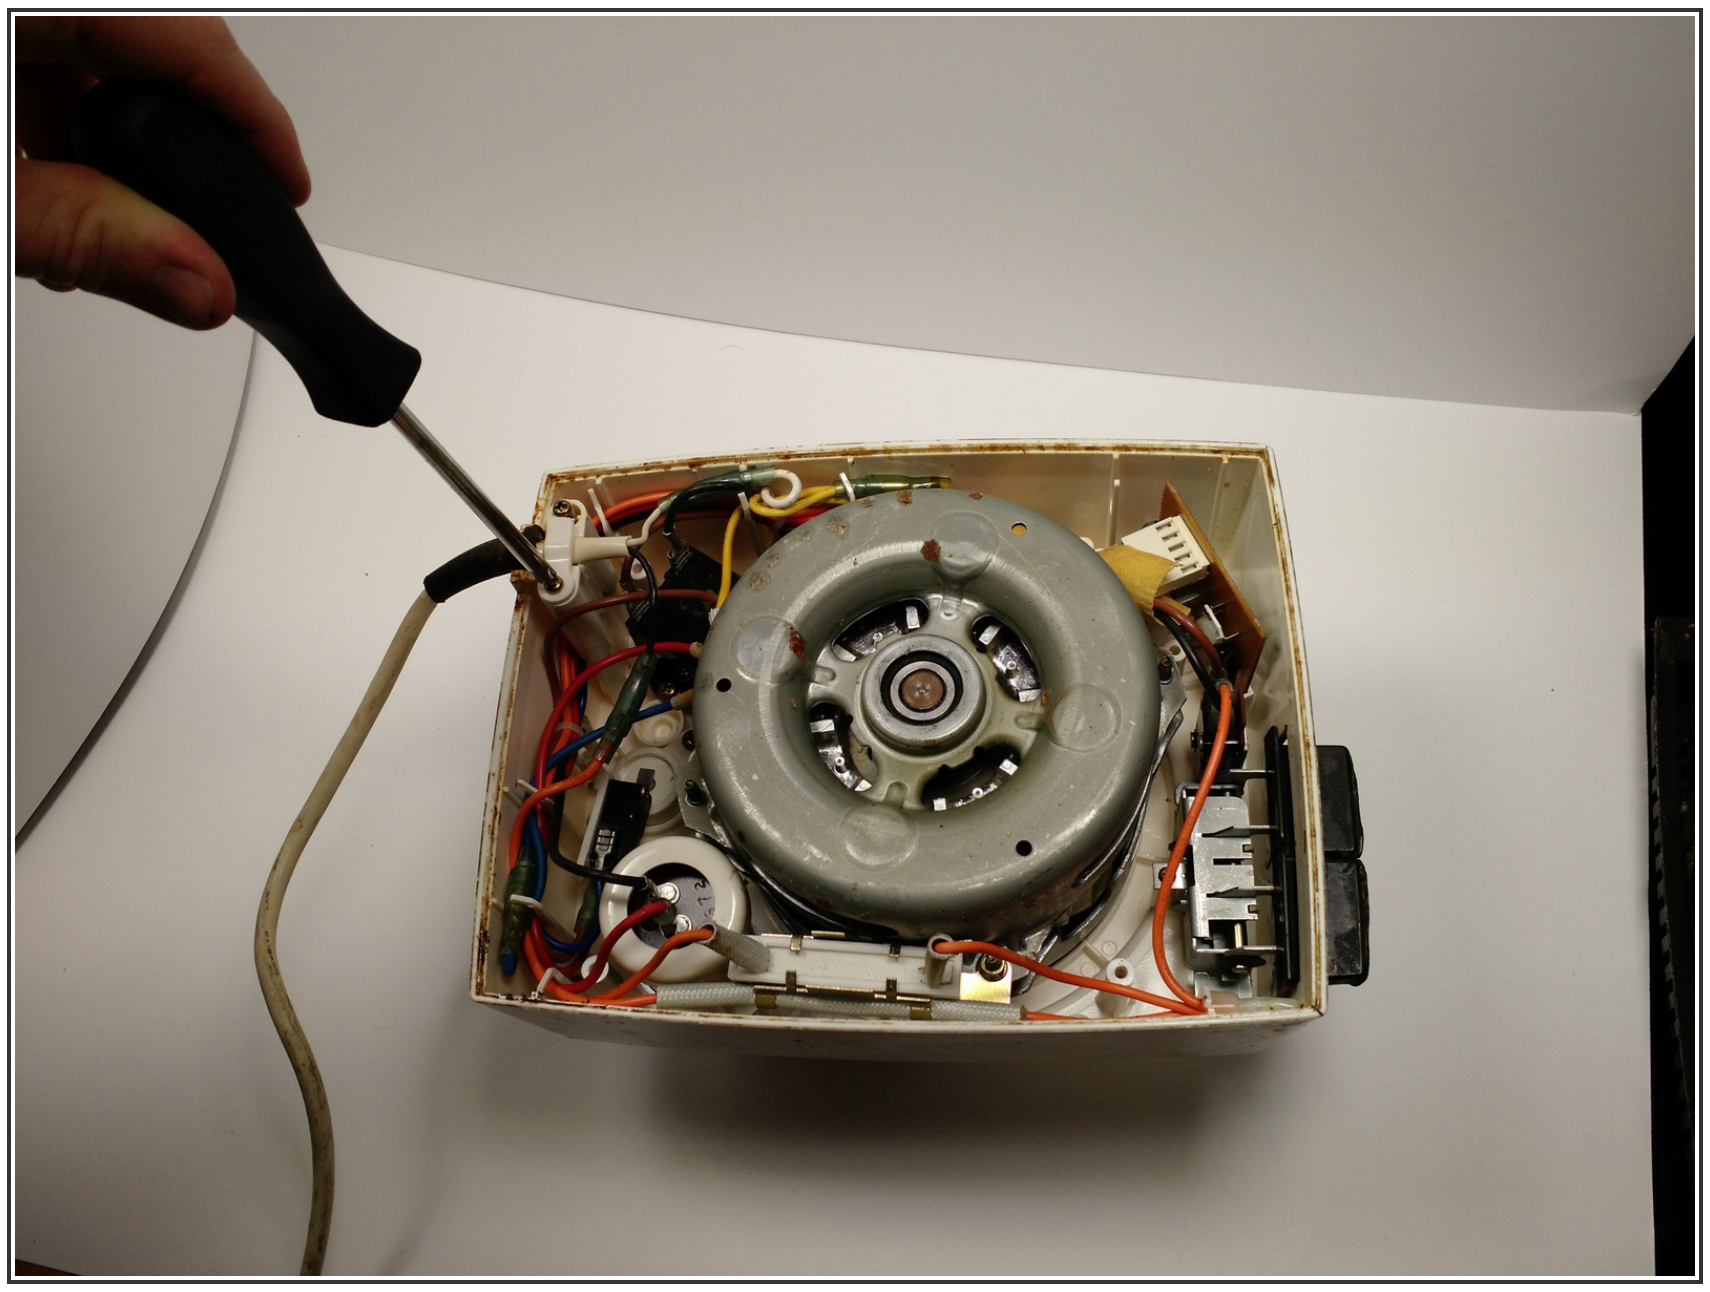

- Remove the two 62 mm Phillips #2 screws from the cable retaining clip.


Step 4

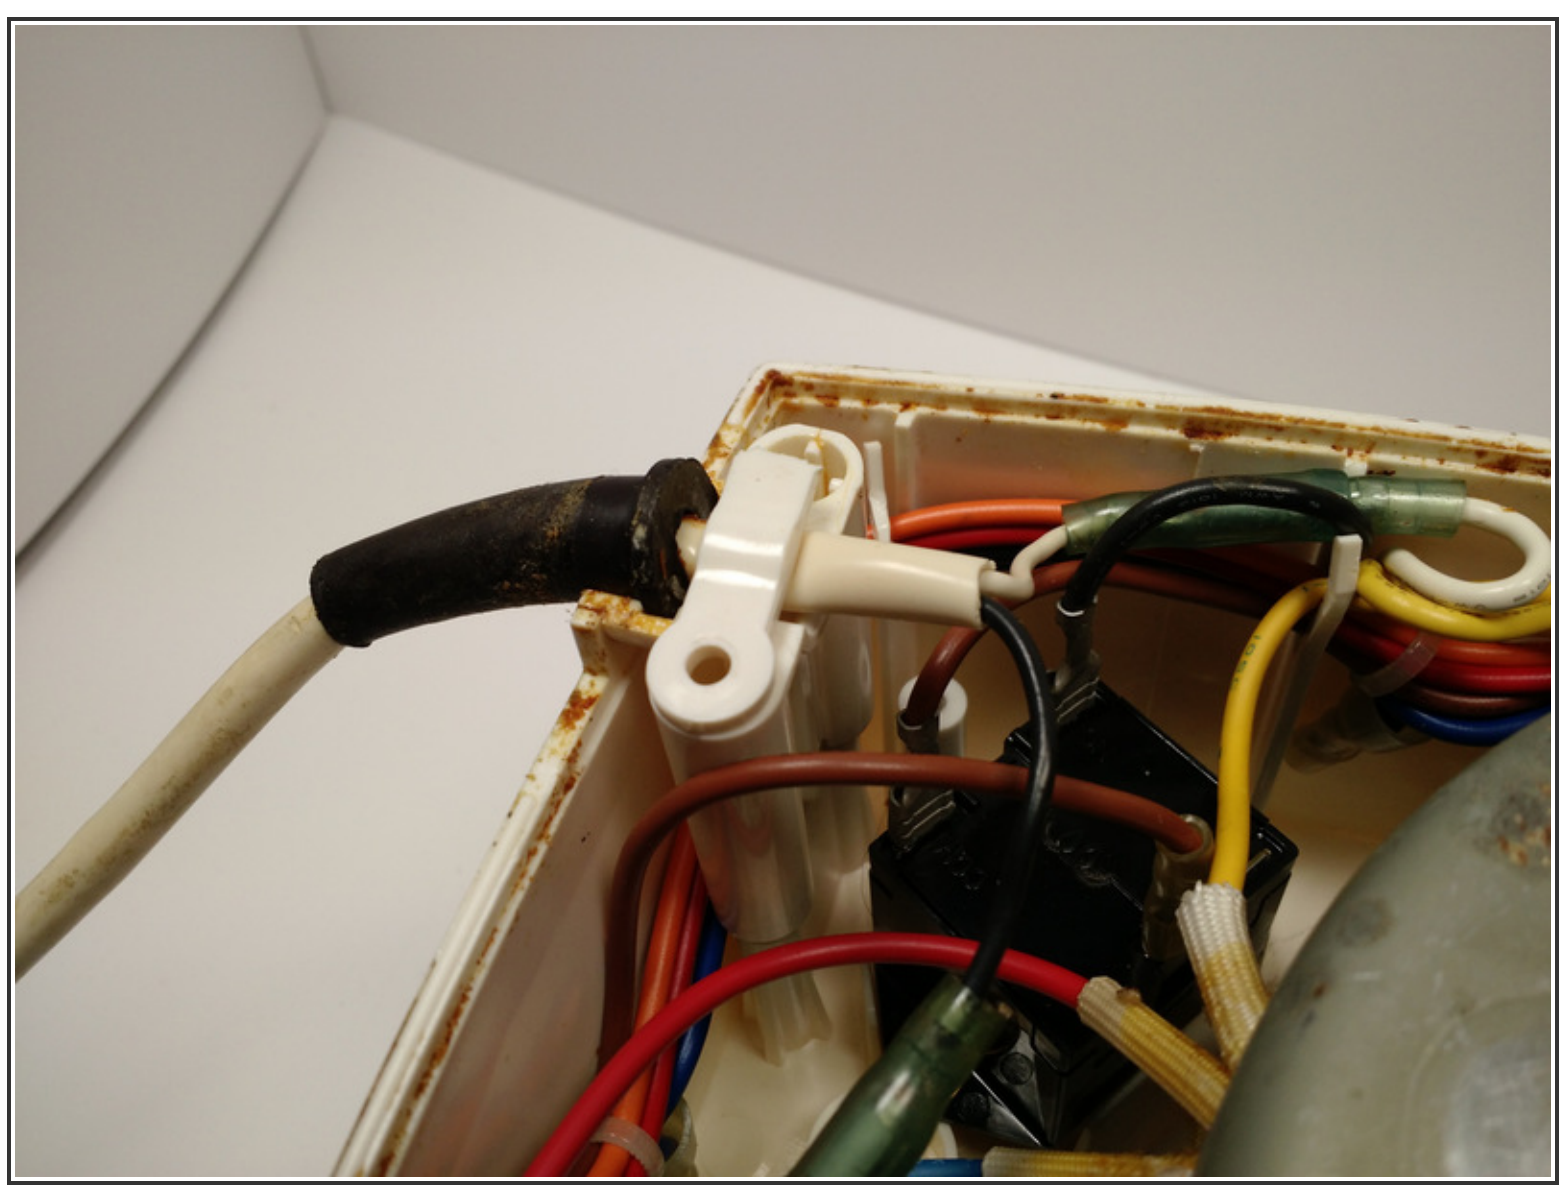


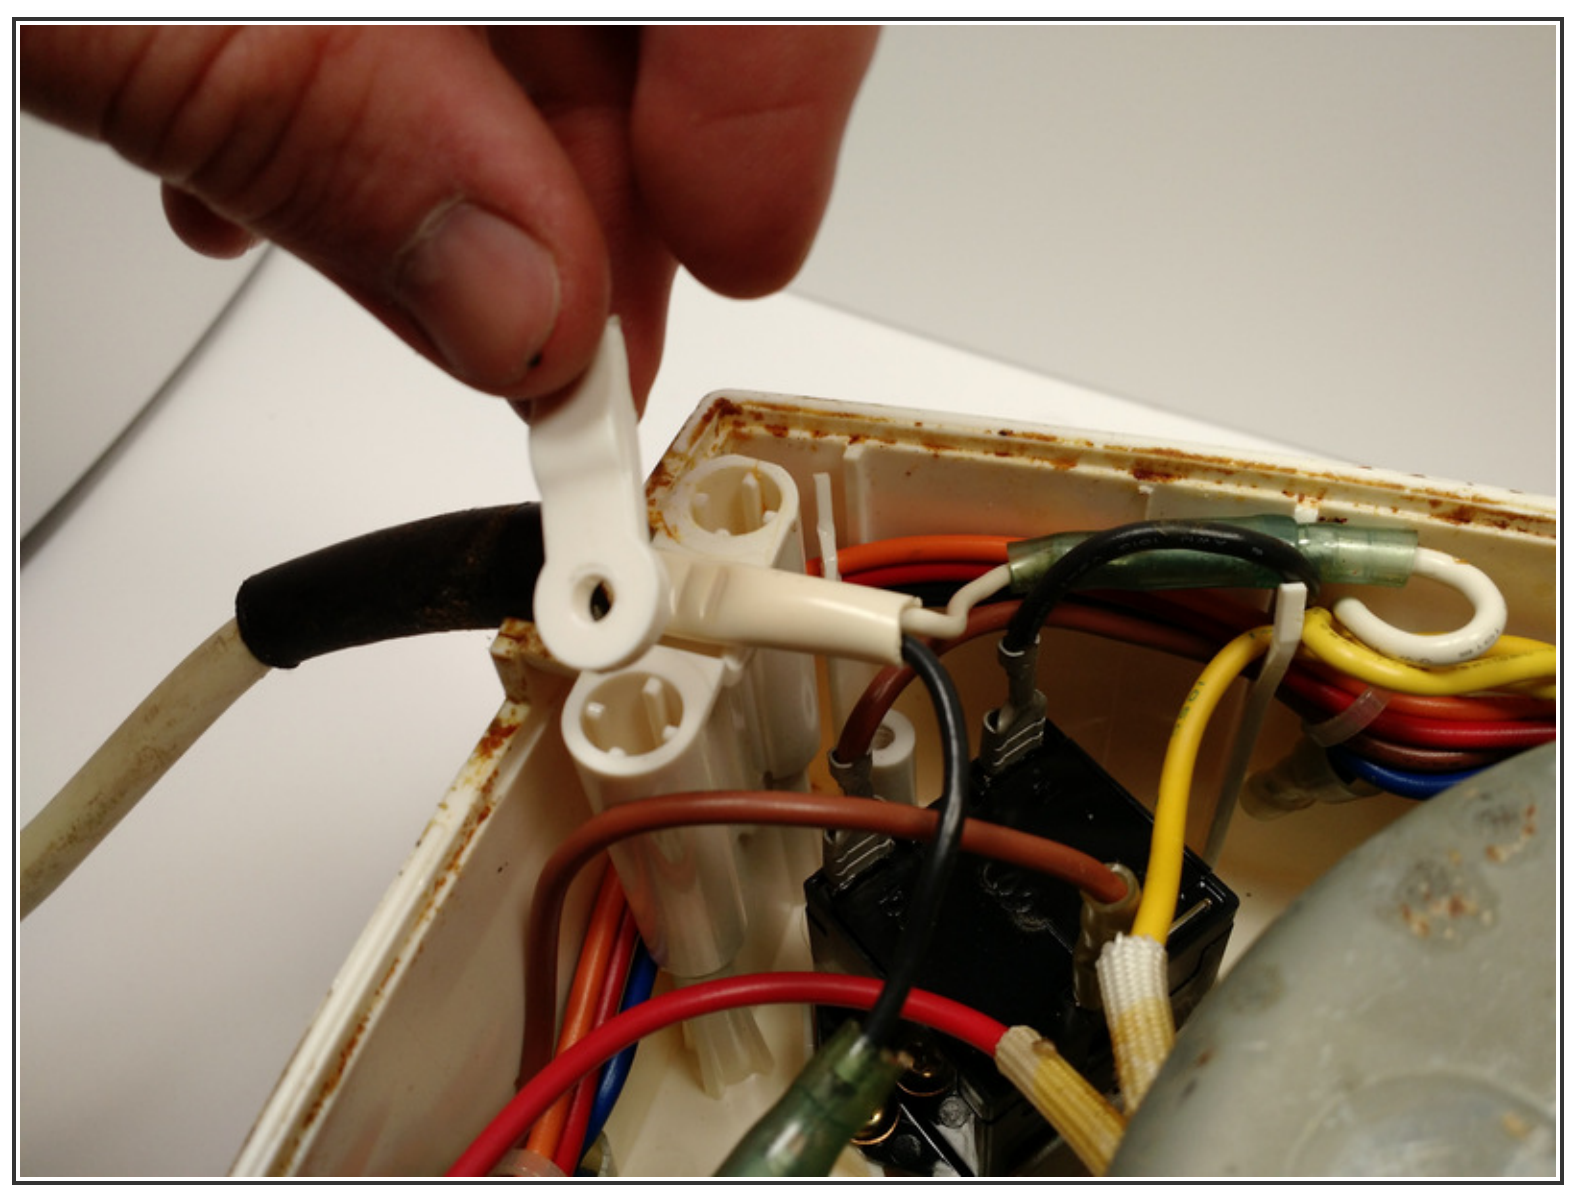

- Lift off the cable retaining


Step 5

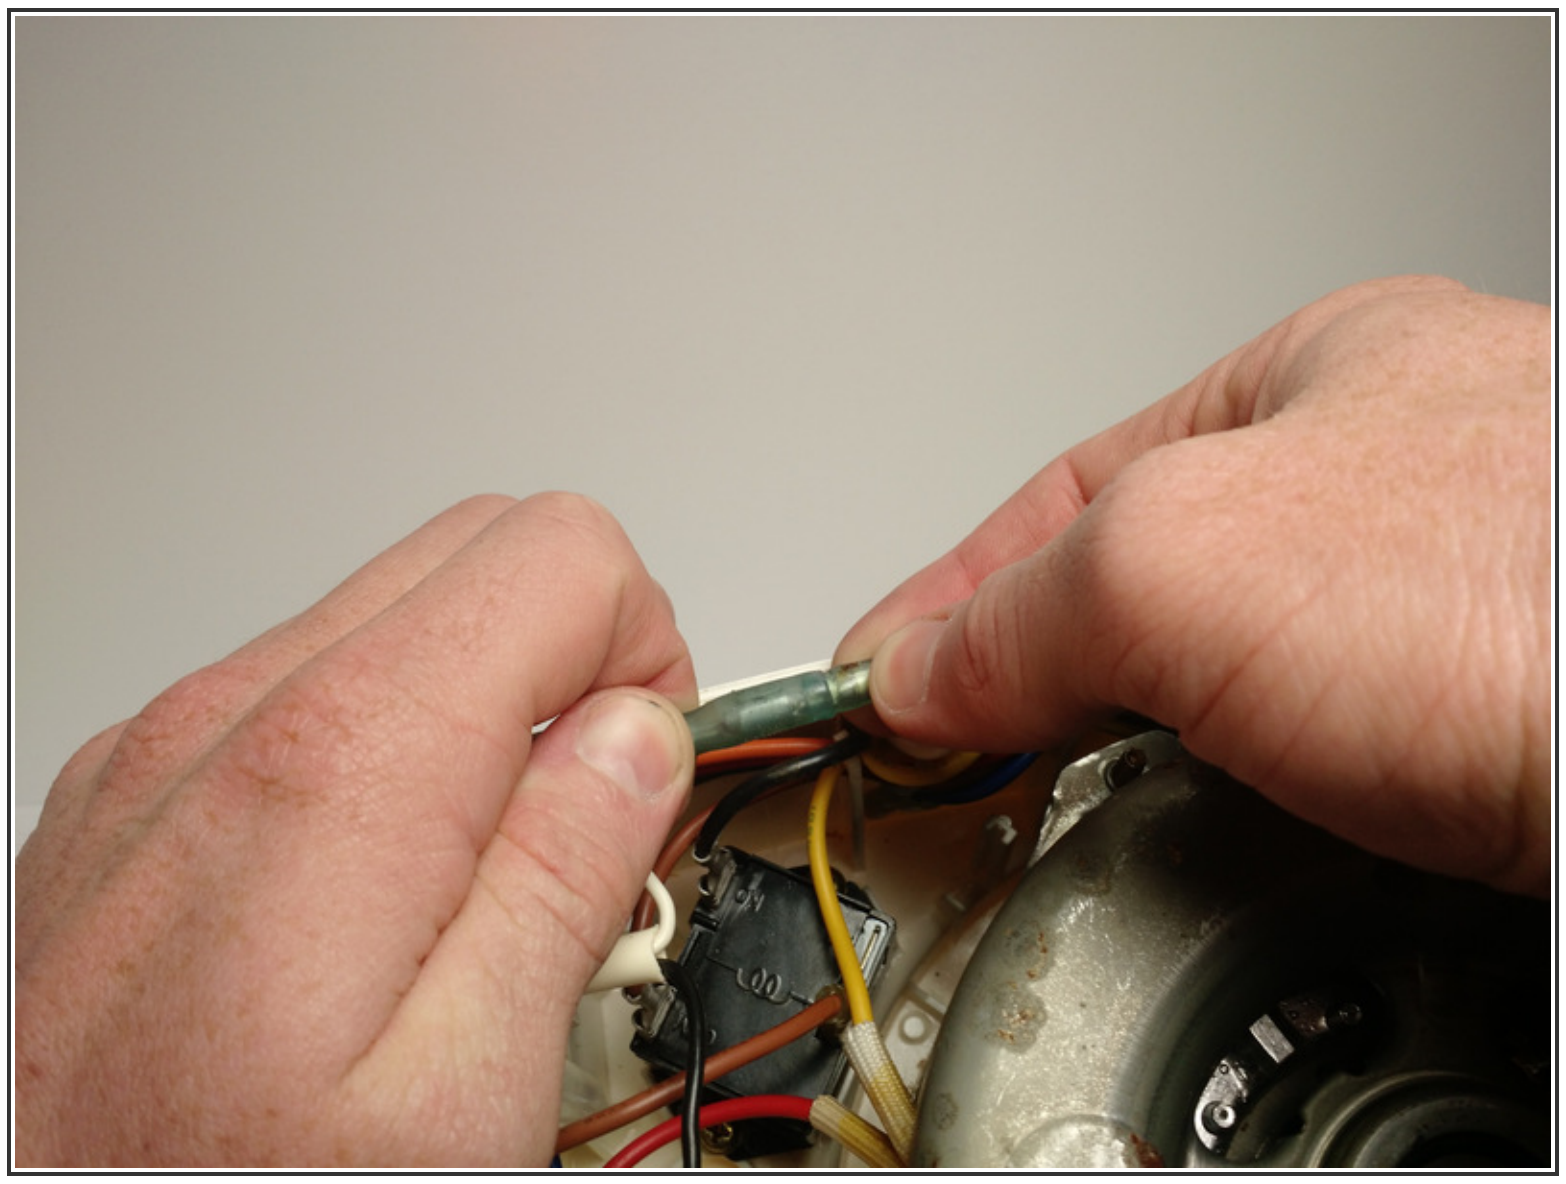


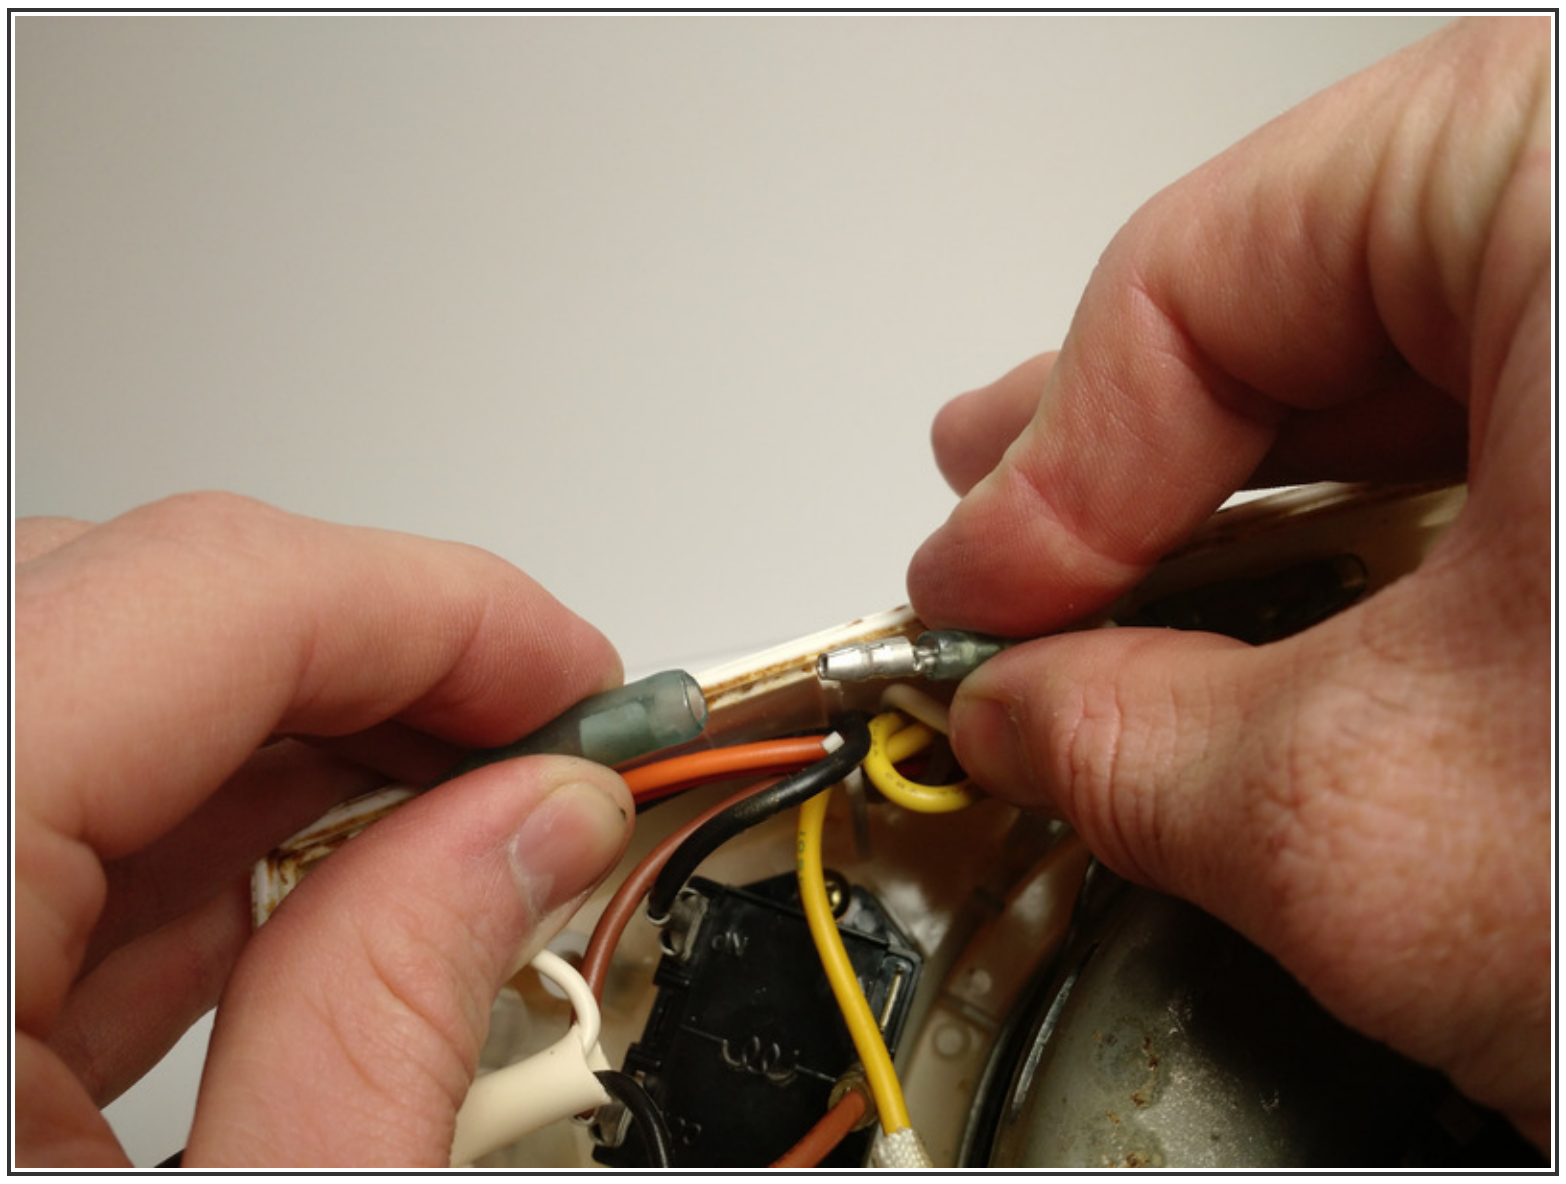

- Pull apart the two wires of the power cable at their connections as shown.

Step 6

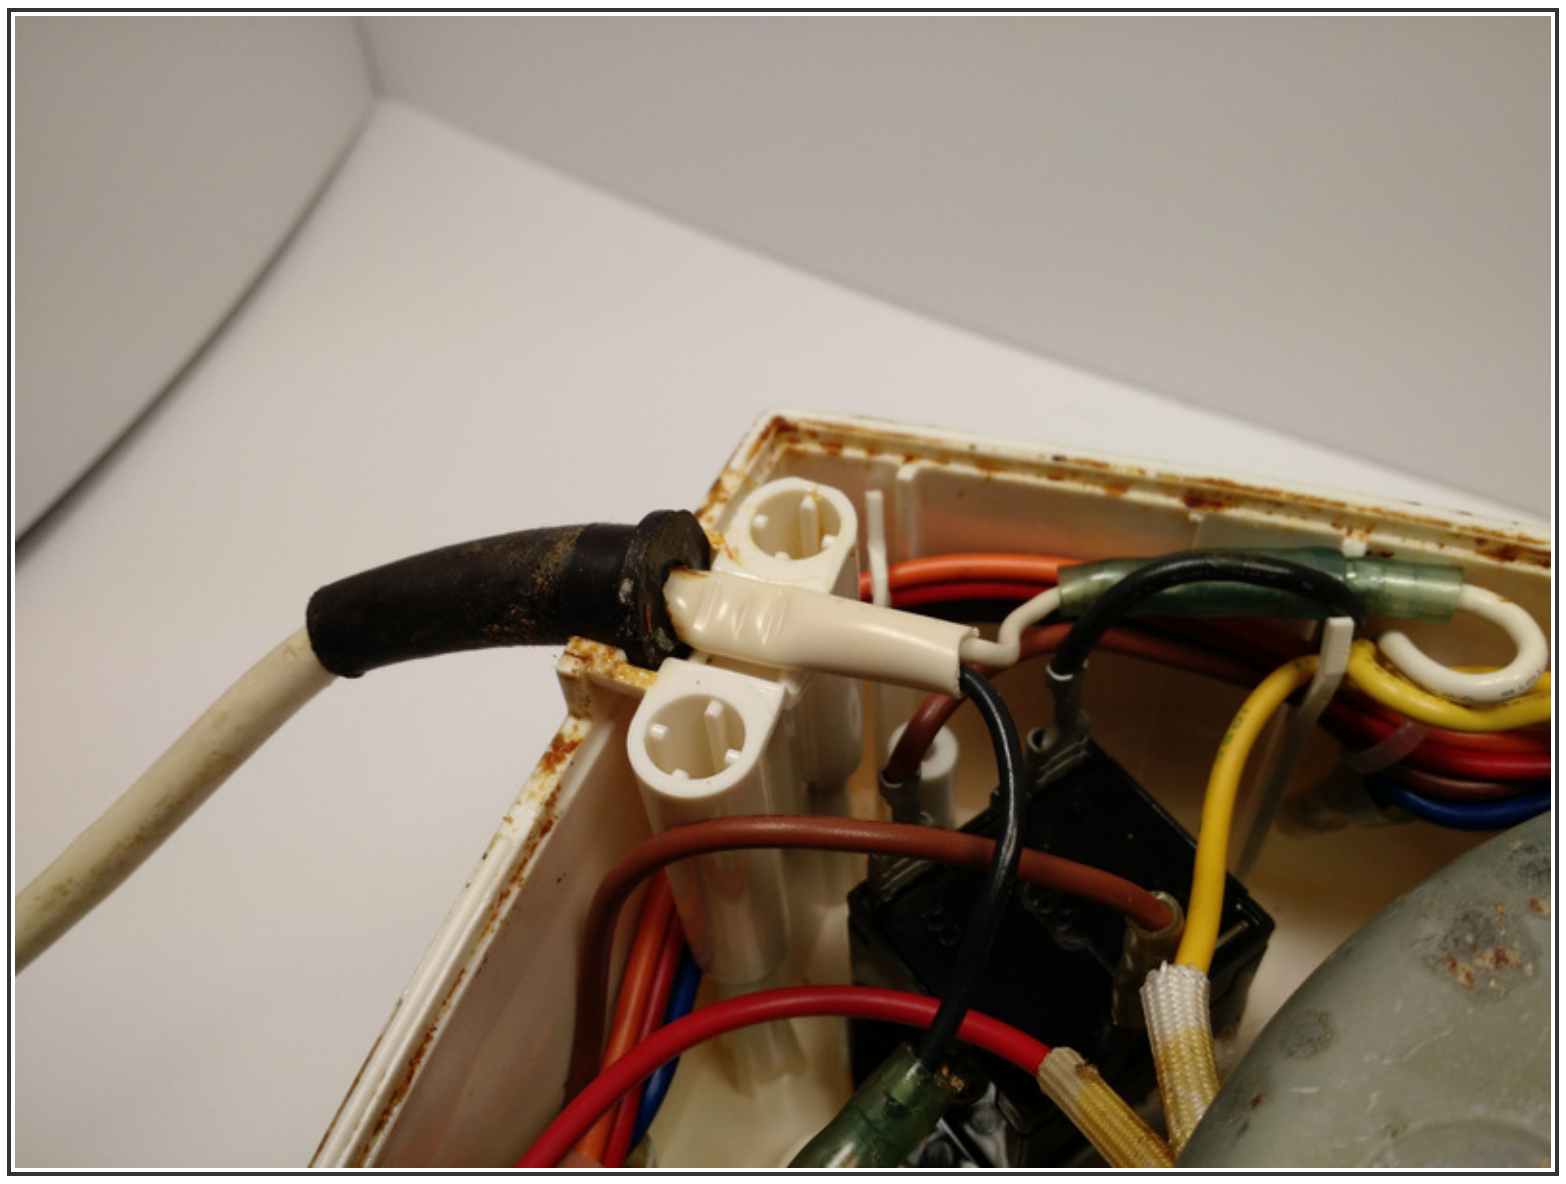

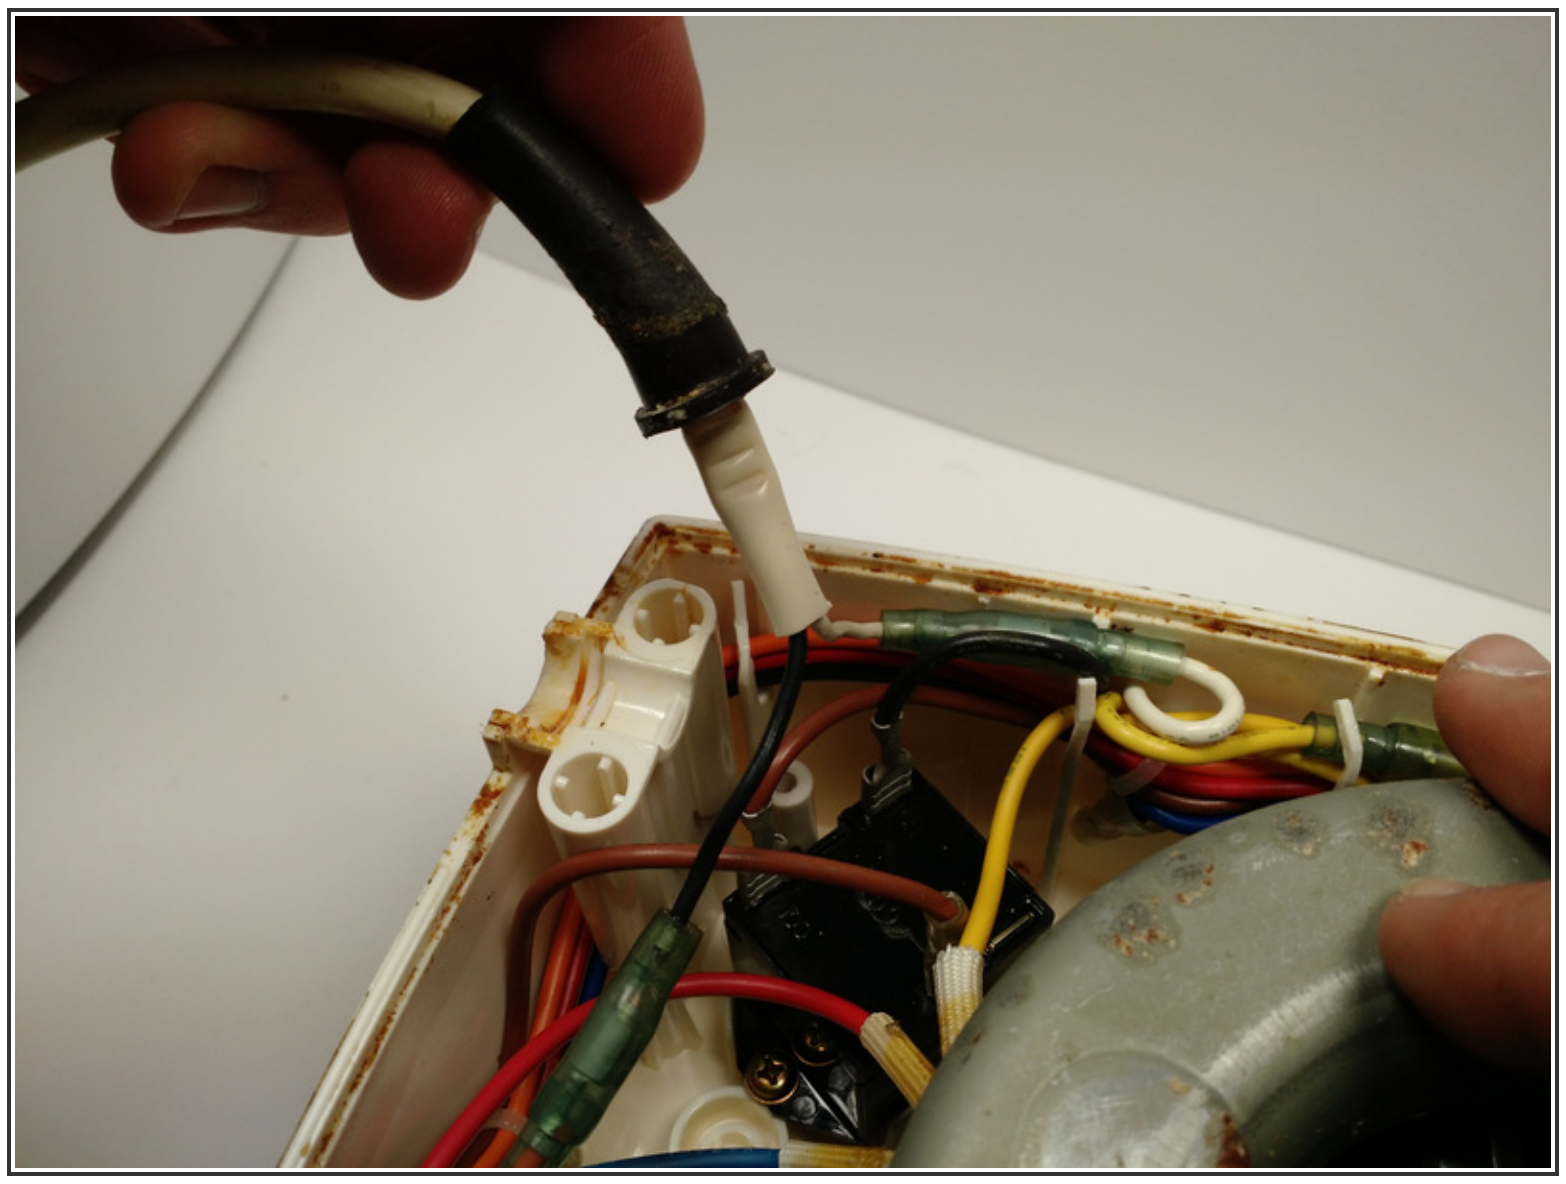

- Lift out the cable.

To reassemble your device, follow these instructions in reverse order.

This document was last generated on 2017-07-10 09:30:57 AM.